

P/N	Connector Figure	Radio Brand	Radio Models
K1		RELM	RPV516A, 599A, Plus/RPU416A, 499A Plus
		Kenwood	TK-208, TK-2100(ProTalk), TK-2102(ProPower), TK-2130(ProTalk XLS), TK-220, TK-240, TK-240D, TK-248, TK-250, TK-260, TK-260G, TK-270, TK-270G, TK-308, TK-3100(ProTalk), TK-3101(FreeTalk XL), TK-3102(ProPower), TK-3130(ProTalk XLS), TK-3131 (FreeTalk XLS), TK-320, TK-340, TK-340D, TK-348, TK-350, TK-353, TK-360, TK-360G, TK-370, TK-370G, TK-372G, TK-430, TK-431, TK2200, TK2202, TK3202, TK3200, TK3201, TK2160, TK3160, TK2170, TK3170, TK208, TK373, TK3173
		HYT	TC620, TC700EX
M1		Motorola	CP100, CP125, CP150, CP185, CP200, CT150, CT250, CT450, CT450LS, GP2000, GP350 (requires a Motorola HLN9482 adaptor), GP300, GP308, GP280, GP68, GP88, GTI, GTX, LTS2000, P040, P080, P110, P1225, P1225LS, PR400, PRO3150, SP10, SP21, SP50, XTN446, XTN500, XTN600, XV1100, XV2100, XU1100, XU2100, XU2600, VL130, VL50, BPR40, DTR Series
		Blackbox	Blackbox, Blackbox+
		HYT	TC500, TC600, TC610, TC700
M2		Motorola	Visar Series
M7		Motorola	TRBO, XPR Series Radios
S6		Icom	F11, F21, F14, F14S, F24, F24S, F33G, F43G, F43TR, F3021, F4021
S8		Icom	F30G, F31G, F40G, F41G, F50, F60, F70, F80, F3061S, F4061S, F4161
Y2		Vertex	MH-360M, MH-450M, MH-50A7A, VH-110, VH-115M, VH-120/130/215M/225M, VX-600, VX-800, VX-900, VX530
Y4		Vertex	VX130, VX160, VX180, VX210, VX210A, VX230 Series, VX350, VX400, VX410, VX420
F		Sprint/Nextel	Falcon Series; i205, i215, i265, i275, i285, i305, i315, i325, i335, i355, i365, i415, i450, i530, i560, i570, i576, i580, i605, i615, i670, i710, i720, i730, i733, i736, i740, i760, i776, i830, i833, i835 Roxy, i836, i850, i855, i860 Woody/Tattoo, i870, i875, i880, i920, i930, ic402, ic502, ic602, ic902